

# Calculation Type - Auto-Step versus Force-Step

**Toggles Auto-Step or Force-Step**

**Help Buttons Show Versions of Auto-Step and Force-Step Diagrams below**

**System Corner Elevation**

**Auto Step**

Vertical Separation from Limiting Factor (e.g. 12", 18" 24")-> **A**

Up-Slope Edge - Elevation of Limiting Factor (e.g. -80") -> **B**

Down-Slope Edge - Elevation of Limiting Factor (e.g. -90") -> **C**

**Force Step**

Base of Chamber Row #1 (e.g. -55")-> **A**

Elevation Drop between Rows (e.g. 2")-> **B**

*Input not allow or required in grayed out fields (menu is in Auto-Step entry mode now)*

