



SeptiCAD Toolbars

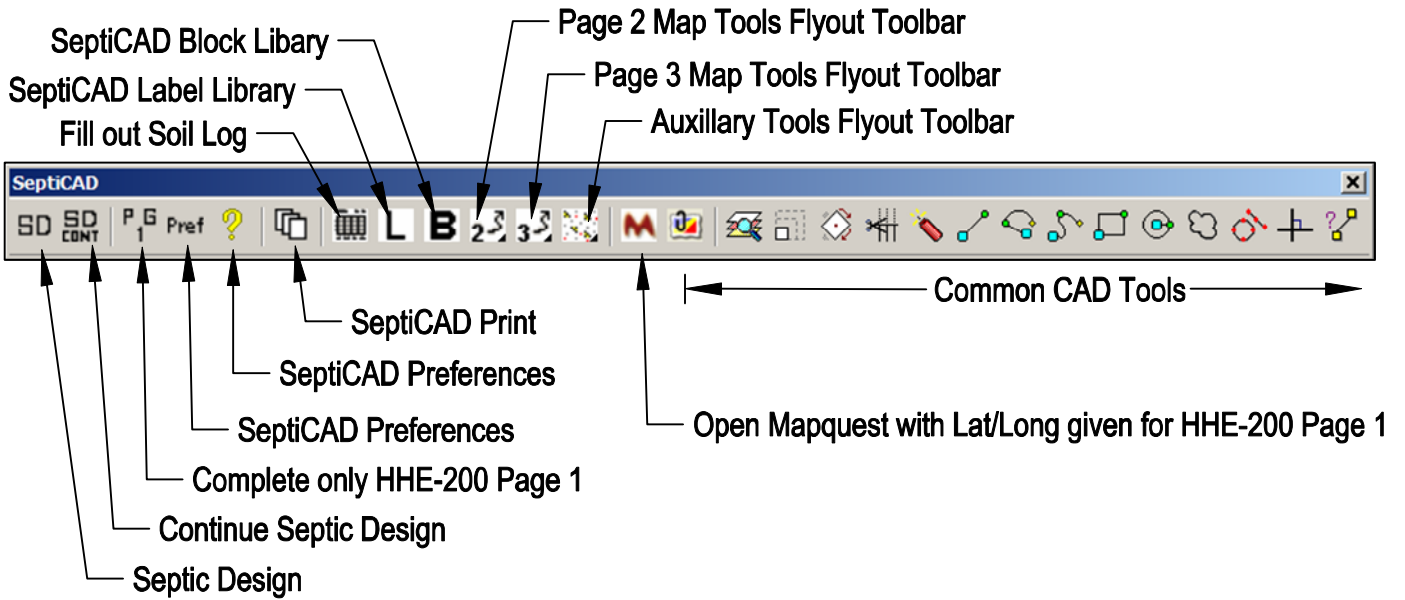


To make Flyout Toolbars normal toolbars: Right click the toolbar and select that toolbar.

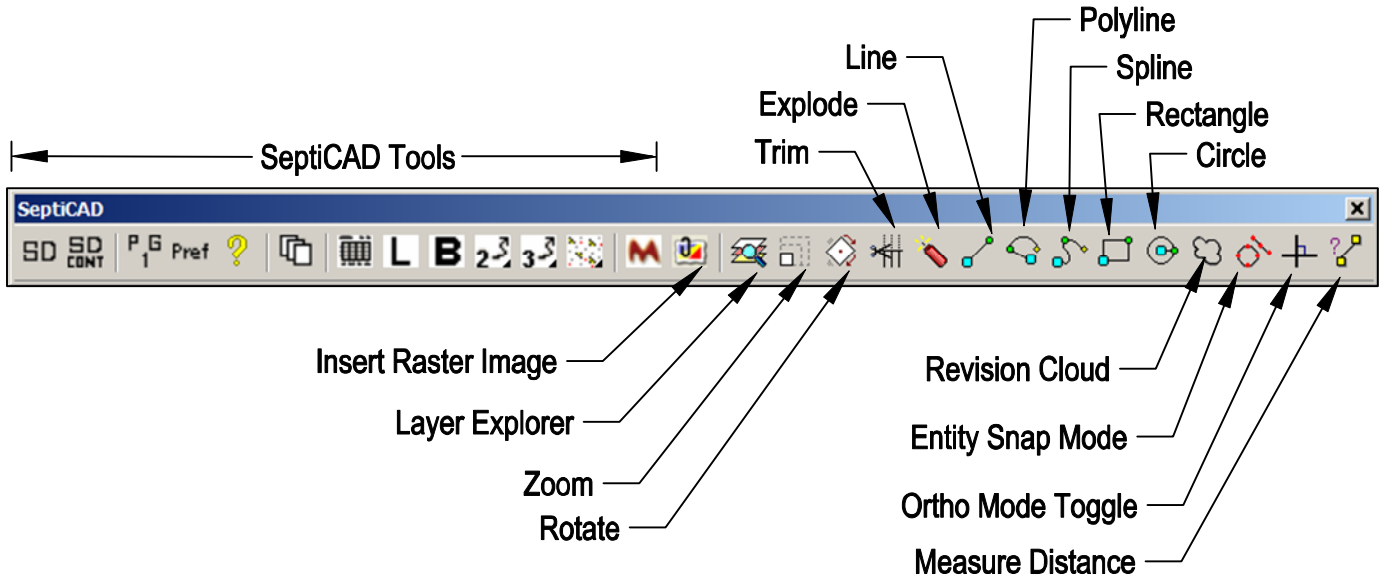


SeptiCAD Toolbars (Flyout Toolbars)

Page 2 & 3 Map Tools - Flyout Toolbars

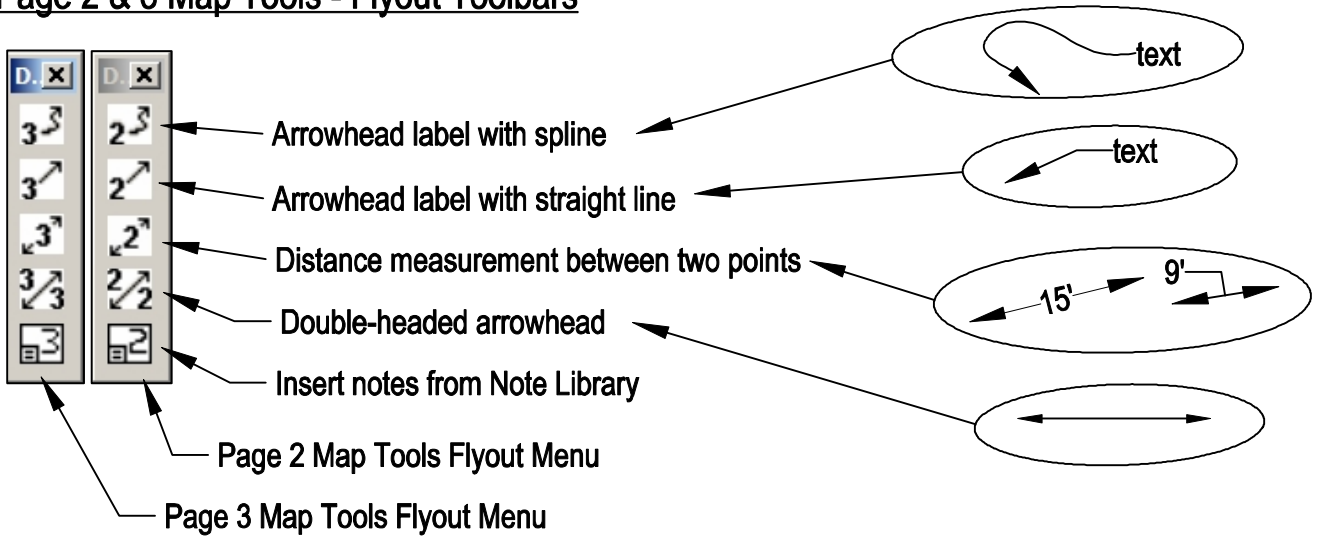

Auxillary Tools - Flyout Toolbars

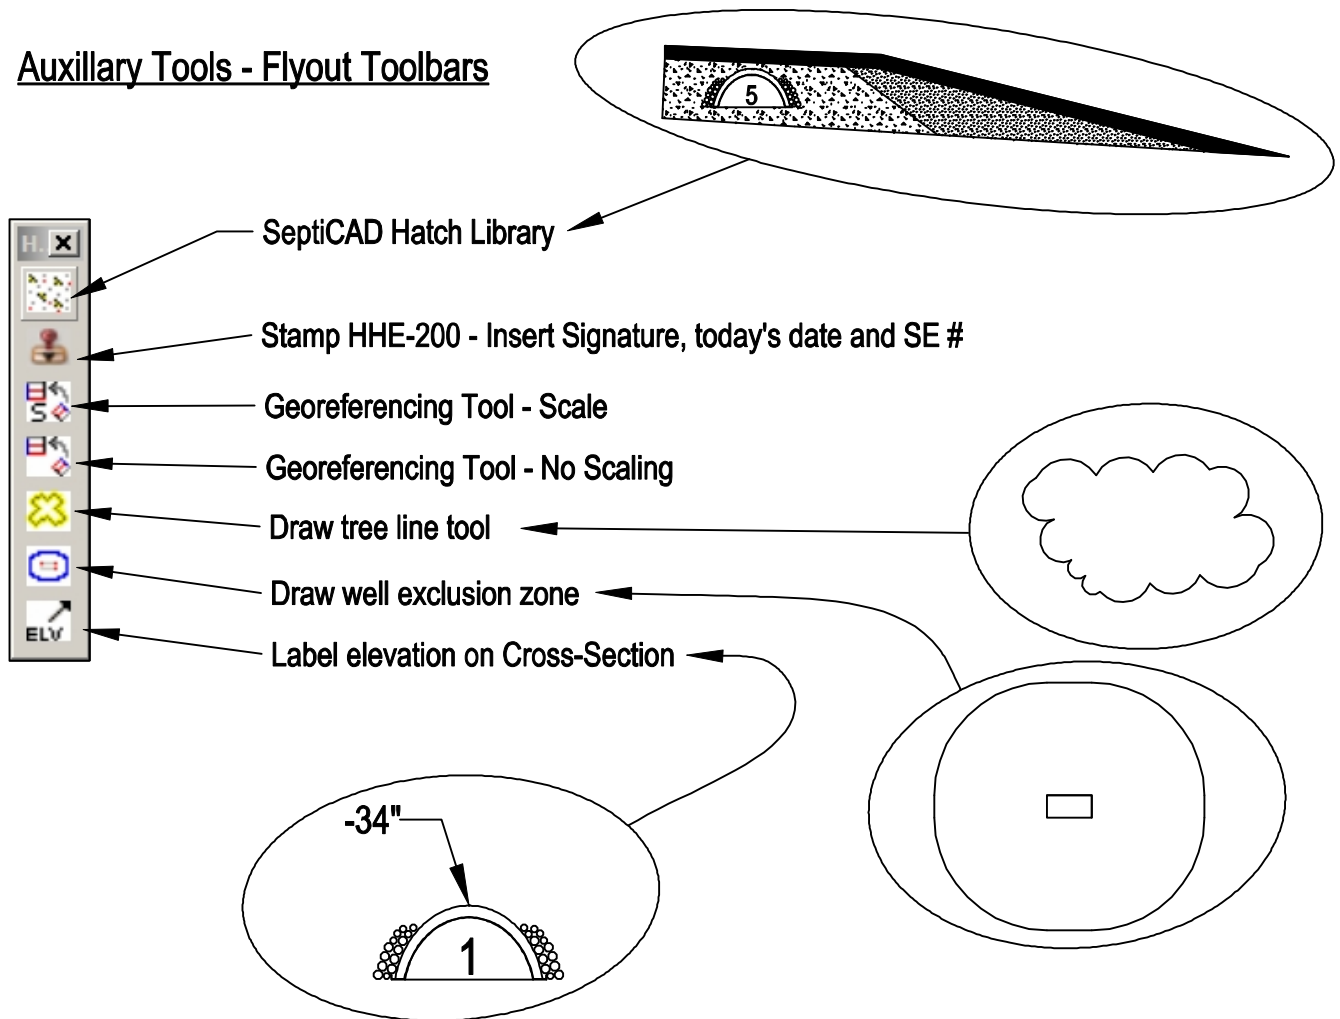

SeptiCAD Command Line Functions:

septic - Runs Program and opens Main Design Window

art2 - Straight arrowhead Label for Page 2

art3 - Straight arrowhead Label for Page 3

ars2 - Spline arrowhead Label for Page 2

ars3 - Spline arrowhead Label for Page 3

ard2 - Dimension for Page 2

ard3 - Dimension for Page 3

suser - Opens SeptiCAD Preferences Window

sblock OR sbb- Opens Insert Block/Object Window

slabel OR sll - Open Insert Label Window

shatch - Open SeptiCAD Hatch Library

log - Opens Soil Log Window

mapscale - change map scales (this is stored in the DWG file when a septic design is created)

tree - draw tree line

Useful CAD Command Line Functions:

L - Line

PL - Poly Line

C - Circle

RO - Rotate

SPL - Spline

X - Explode

Z - Zoom

Useful CAD Shortcuts:

F3 - Toggle Snap Mode

F8 - Toggle Ortho Mode

Mouse Roller - Use to Zoom in and out